





Soleplate: fold around heavy card and glue

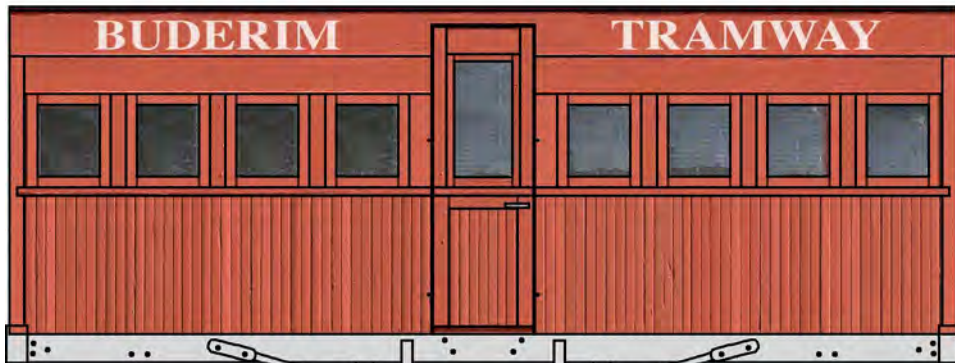

.Side: ignore underbody except for detail location; note sides extend below deck

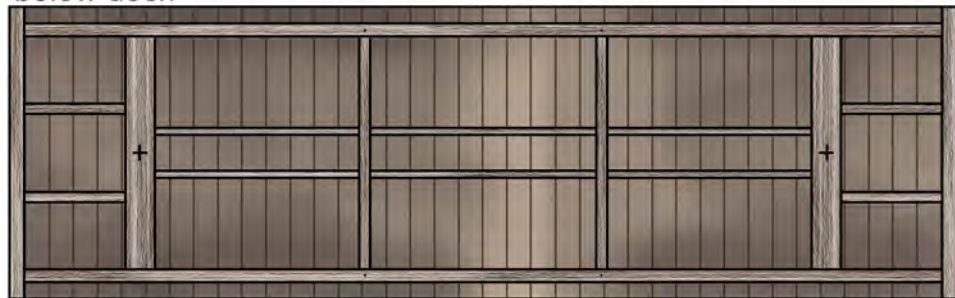

Floor: fit to buffer beam from end assembly, add pivot beams (bolsters), sole plates, etc. Roof (below): trim to fit.



Buffer beam: add after end/side assembled and trim to fit around



Pivot beam: fold around thick card & glue



End: fold buffer around thick card and glue, sides fit to ends, then floor inserts from above to form box. Apply buffer beam cover, trim and wrap tabs around. Truss rods, steps etc., provide detailing as appropriate.



Timber (above) for underframe, steps

Metal (above): underfloor bracing; bar: (below) for steps



## Buderim Coach - O Scale (1:48)

0 4 8 12  
Kit contains textures © Clever Models plc; CG Textures  
[QldRailHeritage.com/mrqc](http://QldRailHeritage.com/mrqc), © February 2014